

KLARSTEIN NIELSTARK
TEIN NIELSTARK KLAR
KLARSTEIN NIELSTARK
TEIN NIELSTARK KLAR
KLARSTEIN NIELSTARK
TEIN NIELSTARK KLAR
KLARSTEIN NIELSTARK

KLARSTEIN

Uhrenbeweger

Watch Winder

Estuche giratorio para relojes

Tourne-montre

Caricatore Orologio

10011125 10026421 10032887

Sehr geehrter Kunde,

wir gratulieren Ihnen zum Erwerb Ihres Gerätes. Lesen Sie die folgenden Hinweise sorgfältig durch und befolgen Sie diese, um möglichen Schäden vorzubeugen. Für Schäden, die durch Missachtung der Hinweise und unsachgemäßen Gebrauch entstehen, übernehmen wir keine Haftung. Scannen Sie den folgenden QR-Code, um Zugriff auf die aktuellste Bedienungsanleitung und weitere Informationen rund um das Produkt zu erhalten:



INHALTSVERZEICHNIS

Sicherheitshinweise 4
 Geräteübersicht 4
 Programme 5
 Hinweise zur Entsorgung 5

English 7

TECHNISCHE DATEN

Artikelnummer	10011125, 10026421, 10032887
Stromversorgung	220-240 V ~ 50/60 Hz

KONFORMITÄTSERKLÄRUNG

Hersteller:

Chal-Tec GmbH, Wallstraße 16, 10179 Berlin, Deutschland.



Dieses Produkt entspricht den folgenden Europäischen Richtlinien:


2014/30/EU (EMV)
 2014/35/EU (LVD)
 2011/65/EU (RoHS)

SICHERHEITSHINWEISE

- Lesen Sie sich alle Hinweise sorgfältig durch und bewahren Sie die Anleitung zum Nachschlagen gut auf.
- Verwenden Sie nur das mitgelieferte Netzteil.
- Trennen Sie das Netzteil vom Gerät, wenn Sie den Uhrenbeweger nicht verwenden.
- Schalten Sie das Gerät aus, wenn Sie die Uhren einsetzen oder entnehmen.
- Schütteln und drehen Sie die Uhrenbeweger nicht, wenn diese stehen.
- Trennen Sie das Netzteil vom Gerät, wenn Sie den Uhrenbeweger nicht verwenden.
- Bitte entnehmen Sie die Uhr nicht, wenn sich der Uhrenbeweger dreht.

GERÄTEÜBERSICHT

Hinweis: Der Anschluss für das Netzteil befindet sich auf der Rückseite des Geräts.

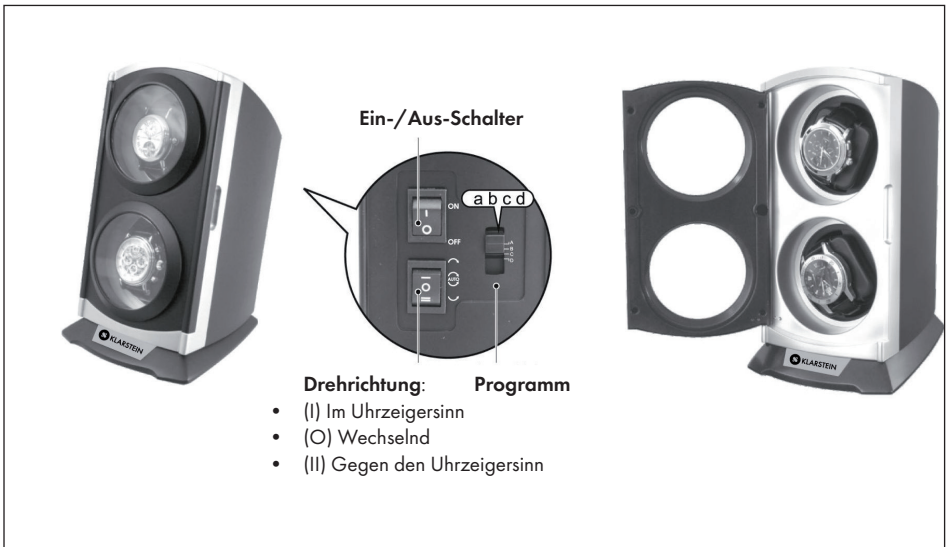

PROGRAMME

Programm A	650 Umdrehungen pro Tag	5 Minuten Betriebsphase / 79 Minuten Ruhephase, dann Wiederholung.
Programm B	900 Umdrehungen pro Tag	5 Minuten Betriebsphase / 56 Minuten Ruhephase, dann Wiederholung.
Programm C	1200 Umdrehungen pro Tag	5 Minuten Betriebsphase / 41 Minuten Ruhephase, dann Wiederholung.
Programm D	1500 Umdrehungen pro Tag	5 Minuten Betriebsphase / 32 Minuten Ruhephase, dann Wiederholung.

HINWEISE ZUR ENTSORGUNG



Befindet sich die linke Abbildung (durchgestrichene Mülltonne auf Rädern) auf dem Produkt, gilt die Europäische Richtlinie 2012/19/EU. Diese Produkte dürfen nicht mit dem normalen Hausmüll entsorgt werden. Informieren Sie sich über die örtlichen Regelungen zur getrennten Sammlung elektrischer und elektronischer Gerätschaften. Richten Sie sich nach den örtlichen Regelungen und entsorgen Sie Altgeräte nicht über den Hausmüll. Durch die regelkonforme Entsorgung der Altgeräte werden Umwelt und die Gesundheit ihrer Mitmenschen vor möglichen negativen Konsequenzen geschützt. Materialrecycling hilft, den Verbrauch von Rohstoffen zu verringern.

Dear Customer,

Congratulations on purchasing this equipment. Please read this manual carefully and take care of the following hints to avoid damages. Any failure caused by ignoring the items and cautions mentioned in the instruction manual is not covered by our warranty and any liability. Scan the QR code to get access to the latest user manual and other information about the product



CONTENT

Safety Instructions 8
 Product Overview 8
 Programs 9
 Hints on Disposal 9

TECHNICAL DATA

Item number	10011125, 10026421, 10032887
Power supply	220-240 V ~ 50/60 Hz

DECLARATION OF CONFORMITY

**Producer:**

Chal-Tec GmbH, Wallstraße 16, 10179 Berlin, Germany.

This product is conform to the following European Directives:


2014/30/EU (EMC)
 2014/35/EU (LVD)
 2011/65/EU (RoHS)

SAFETY INSTRUCTIONS

- Read all the safety and operating instructions carefully and retain them for future reference.
- Please use the AC adaptor supplied with the unit.
- Remove the adaptor when the winder is not in use.
- Always turn off the power when inserting or removing watches.
- Don't shake or rotate when winder is stationary.
- If you do not use this product for a long time, please take off the adaptor.
- Always turn off the power when inserting or removing watches.

PRODUCT OVERVIEW

Note: The power supply connector is located on the back of the unit.

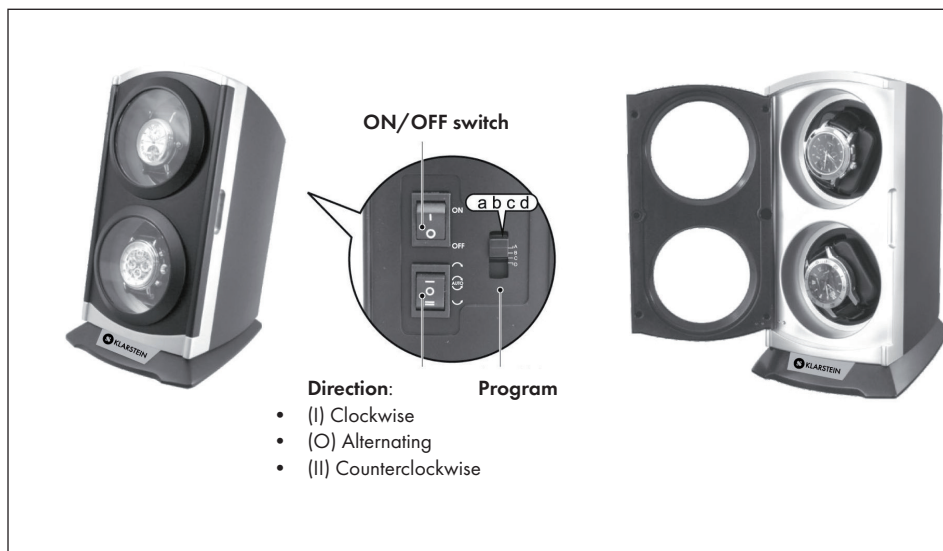

PROGRAMS

Program A	650 turns per day	Rotate 5 minutes, rest 79 minutes and then repeat.
Program B	900 turns per day	Rotate 5 minutes, rest 56 minutes and then repeat.
Program C	1200 turns per day	Rotate 5 minutes, rest 41 minutes and then repeat.
Program D	1500 turns per day	Rotate 5 minutes, rest 32 minutes and then repeat.

HINTS ON DISPOSAL



According to the European waste regulation 2012/19/EU this symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council or your household waste disposal service.

KLARSTEIN NIETSRK

SRSRK KLARSTEIN NIE

KLARSTEIN NIETSRK

SRSRK KLARSTEIN NIE

KLARSTEIN NIETSRK

SRSRK KLARSTEIN NIE

KLARSTEIN NIETSRK